


Construction Cross Section

- Excavate to a depth of 18-24", remove and discard spoils
- Slope grade to the middle of each side of court
- Install 4" perforated, corrugated drain line (sloping to low side of court)
- Install a #57 washed stone across court, leaving 12" for sand
- Install non-woven geo textile fabric over gravel layer
- Install sand to finished elevation

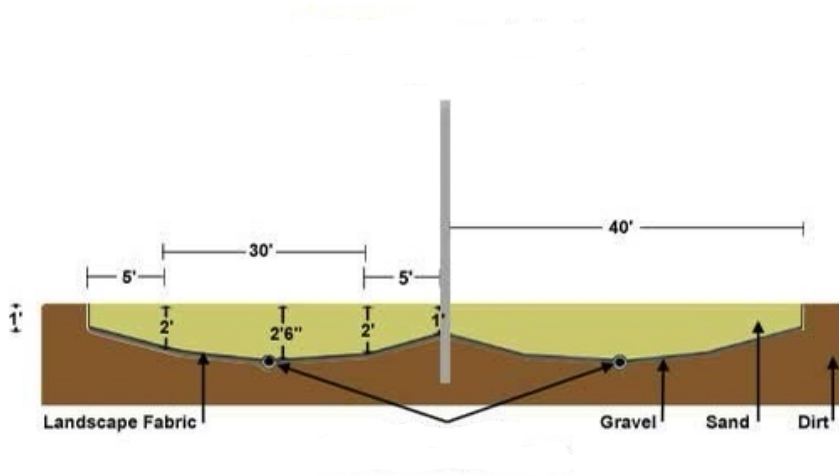

Pole sleeves and Installation

