
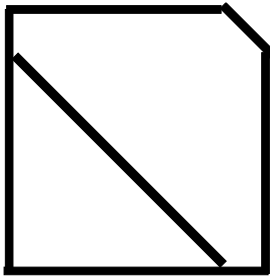


Buss # 105 trolley

Hinges

will need 1.5"
pipe clamp
to
mount hinge

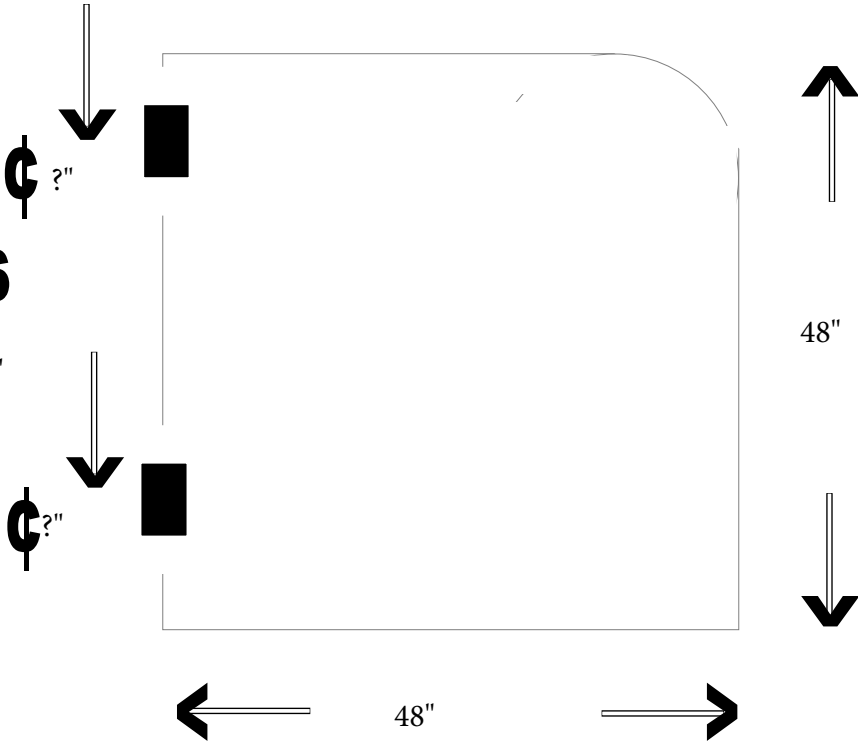



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 107 trolley

Hinges

will need 1.5"
pipe clamp
to
mount hinge

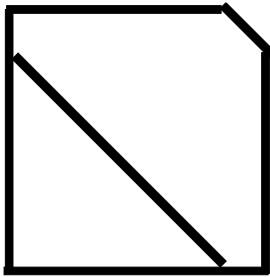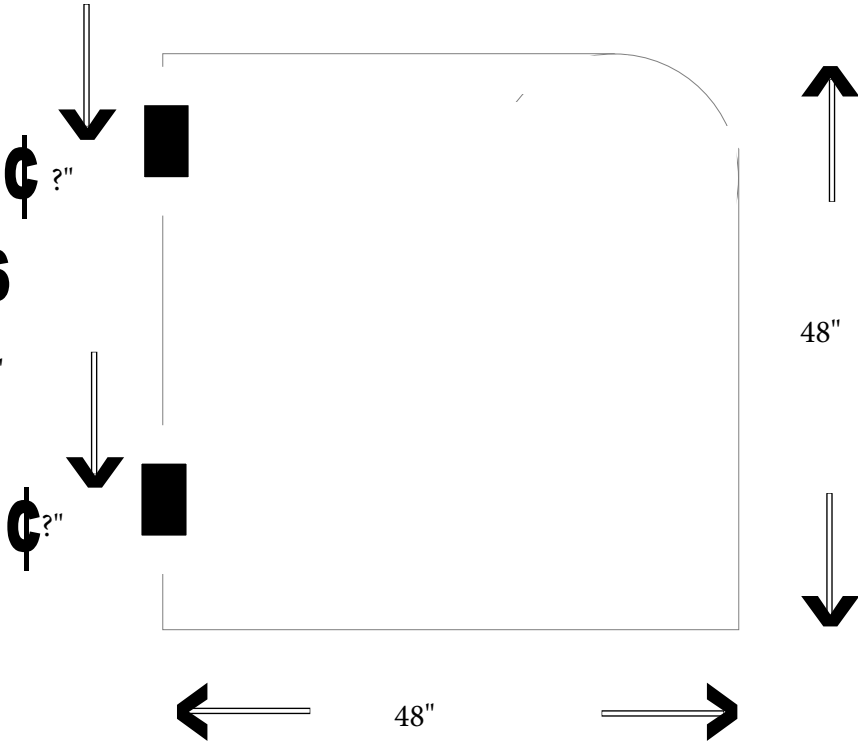



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 108 trolley

Hinges

will need to
add 1.25"
pipe clamp
to mount
16x32" W/
bend-behind
driver

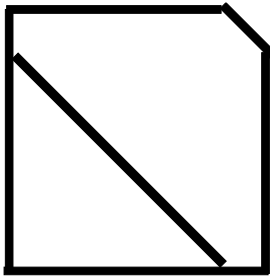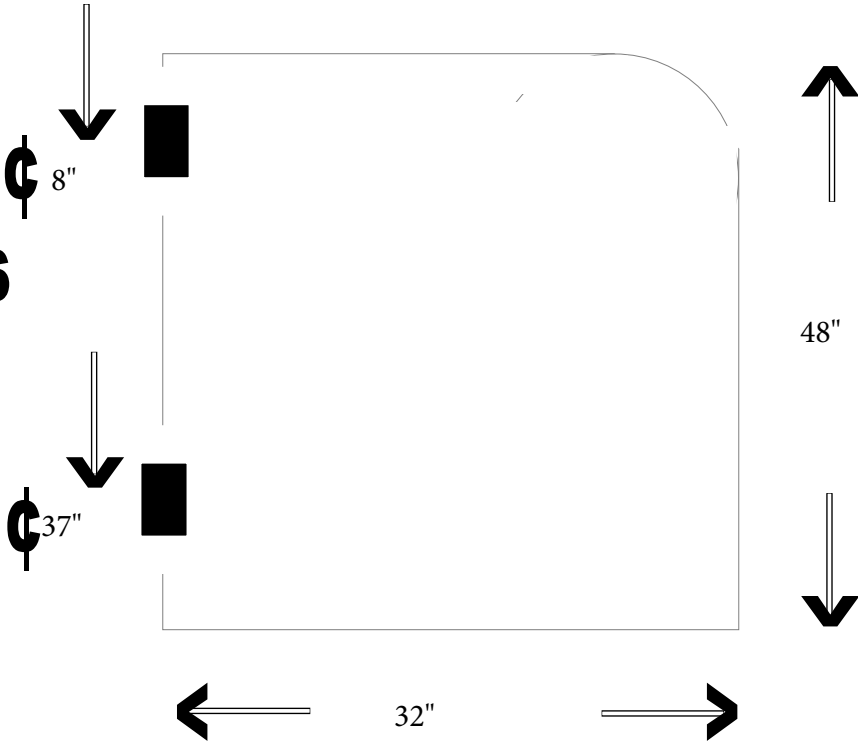



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 109 trolley

Hinges

will need to add 1.25" pipe clamp to mount 17x32" W/ bend-behind driver

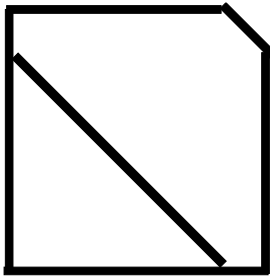
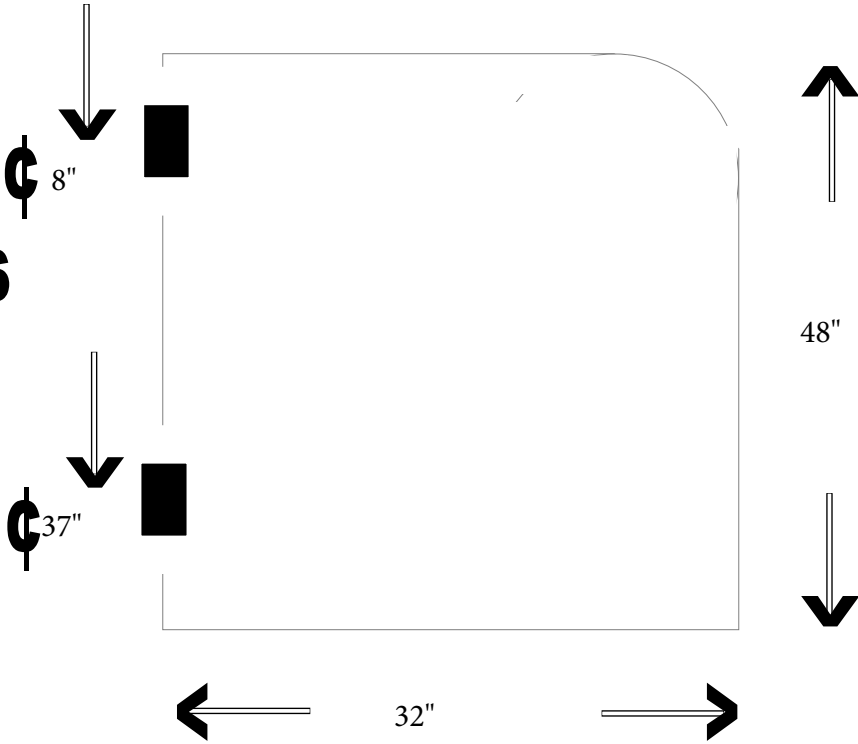


Frame inset .500 on hinge side
1" on to bottom & handle side

Buss # 110 trolley

Hinges



will need to
add 1.25"
pipe clamp
to mount
17x32" W/
bend-behind
driver

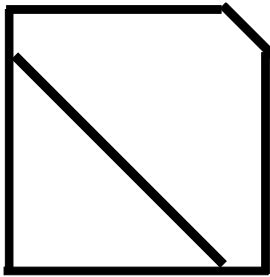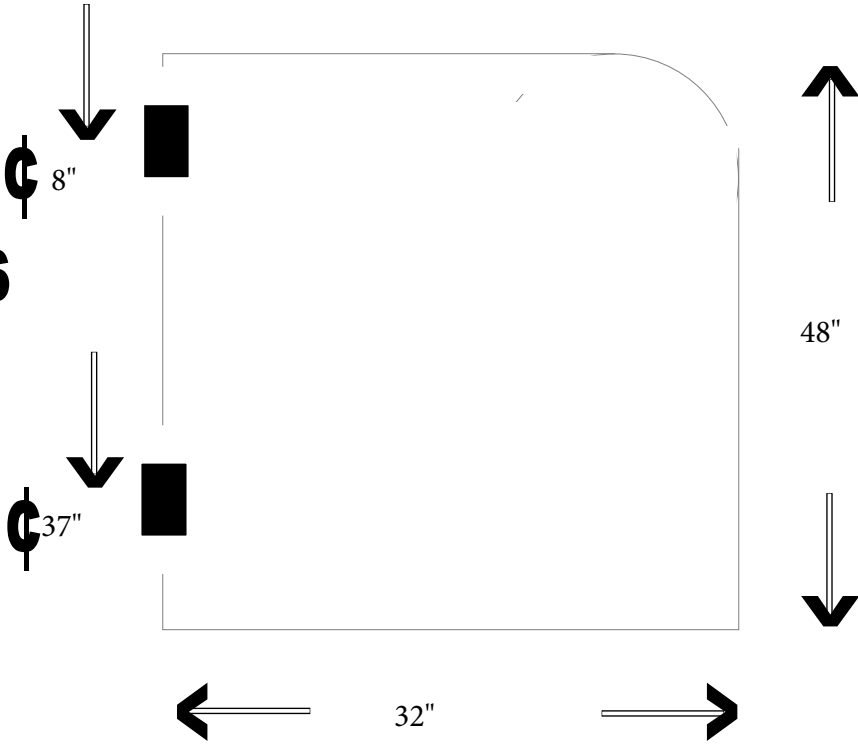

**Frame inset .500 on
hinge side**


**1" on to bottom &
handle side**

Buss # 0632

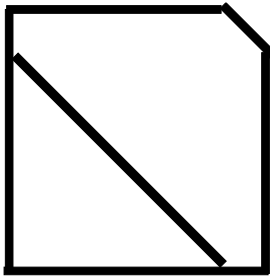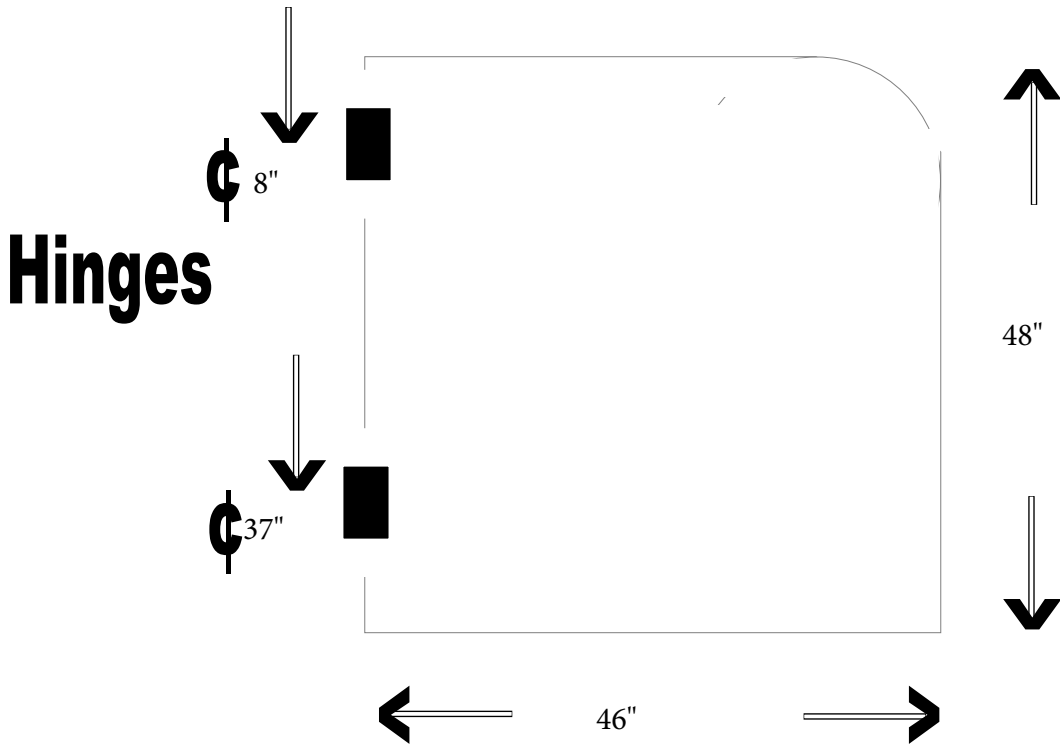


**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 0633

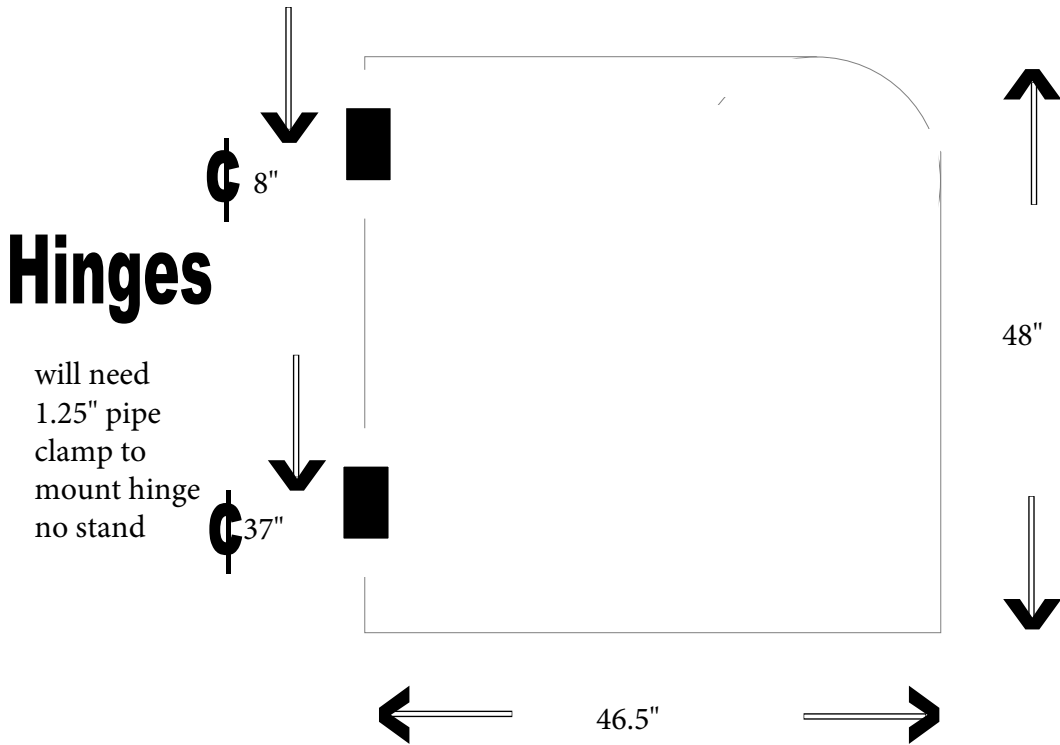

Hinges



will need
1.25" pipe
clamp to
mount hinge
no stand

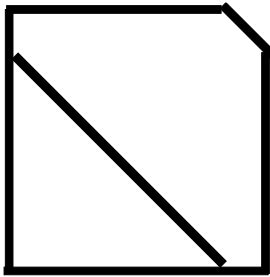

**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 0634

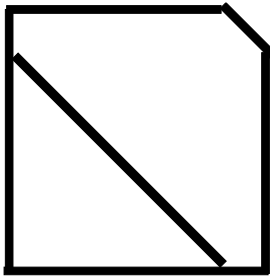
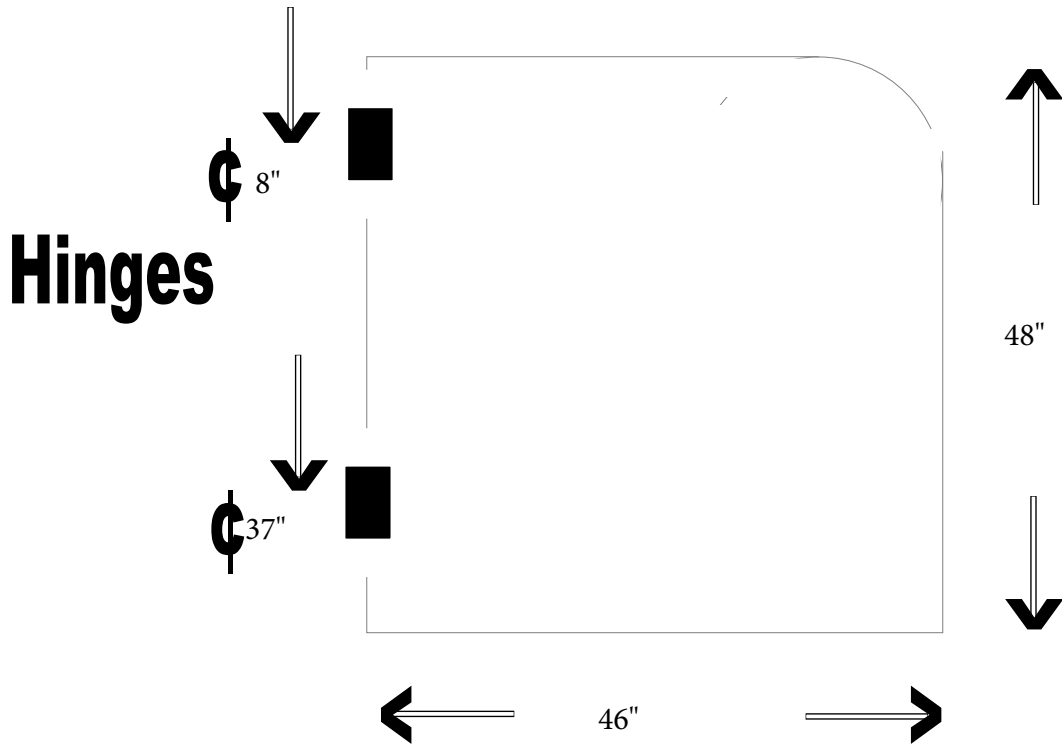


**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 0636

Hinges



will need
1.25" pipe
clamp to
mount hinge

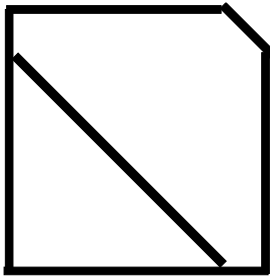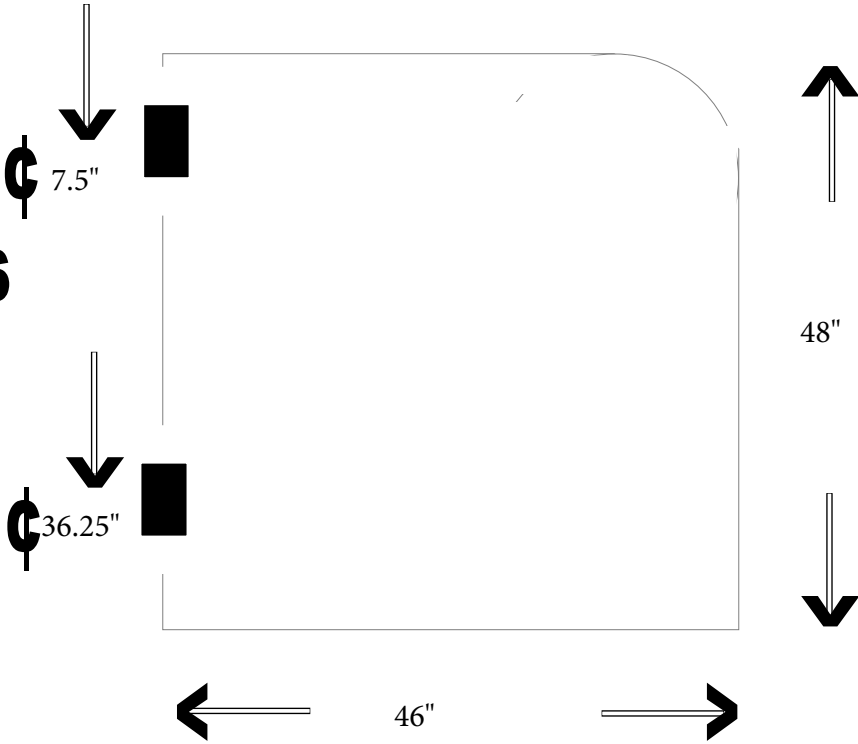

**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 0742

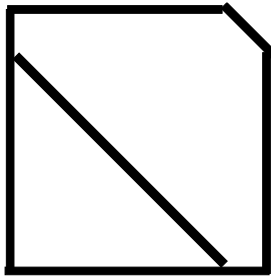
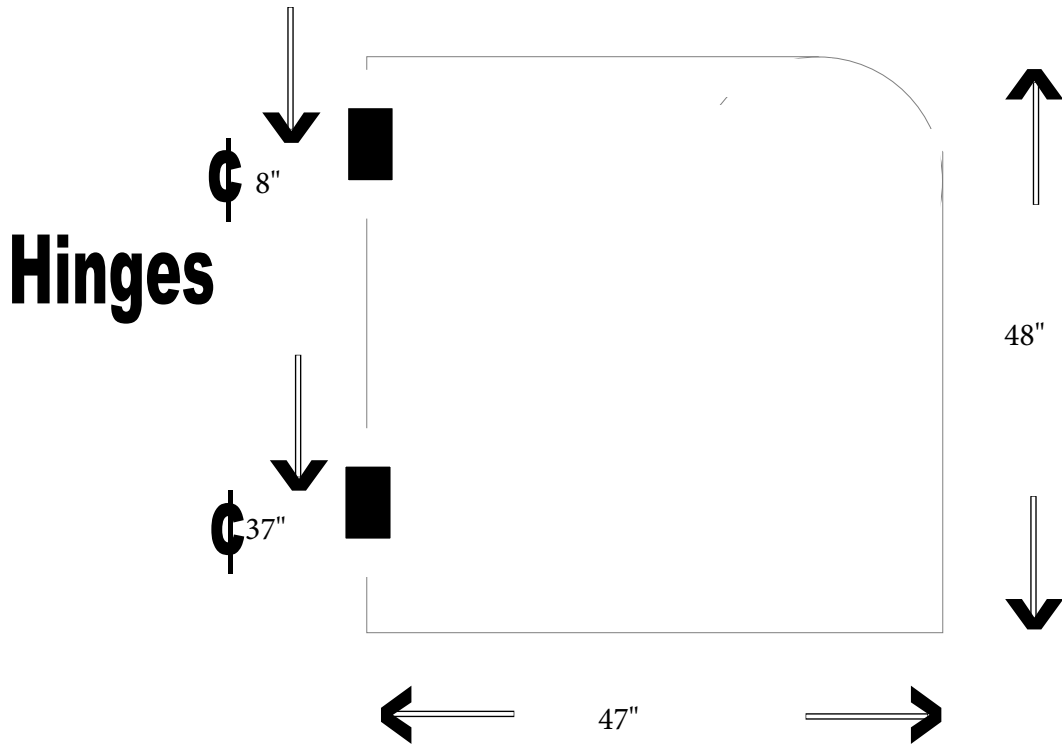


**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1001

Hinges

will need
1.25" pipe
clamp to
mount hinge

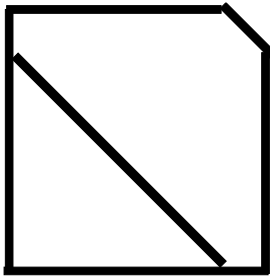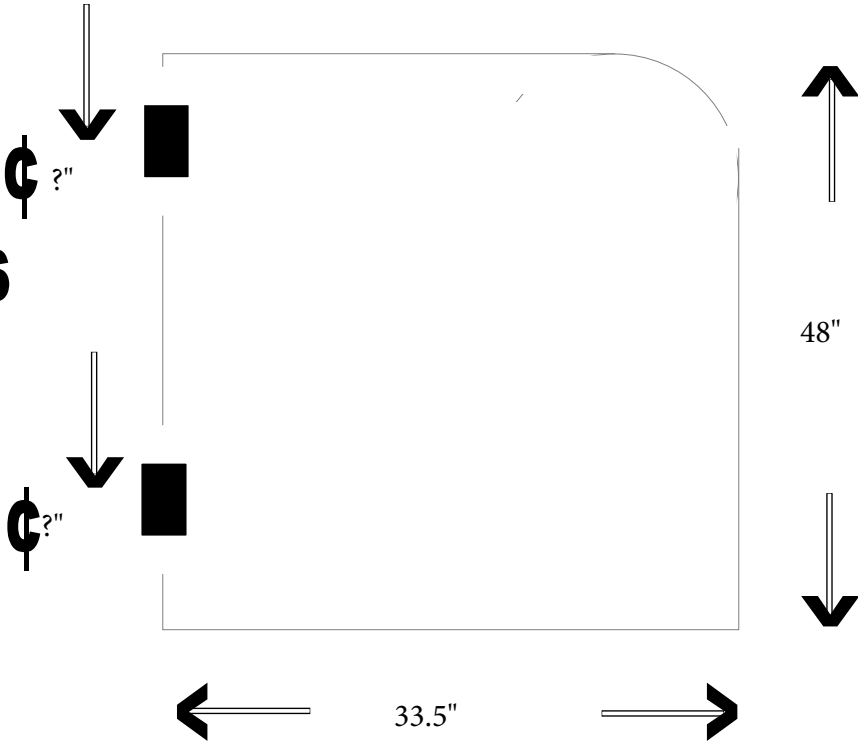



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1002

Hinges

will need
1.25" pipe
clamp to
mount hinge

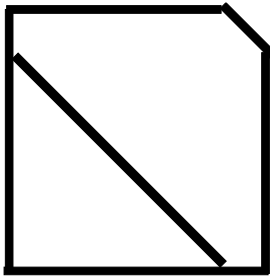
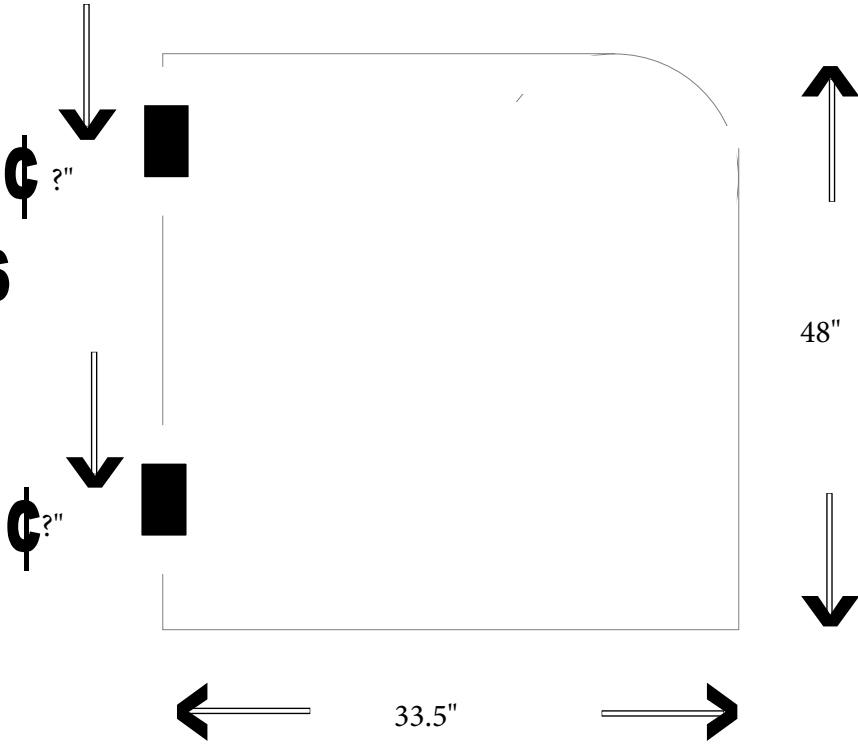


**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1003

Hinges

will need
1.25" pipe
clamp to
mount hinge

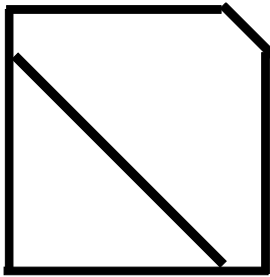
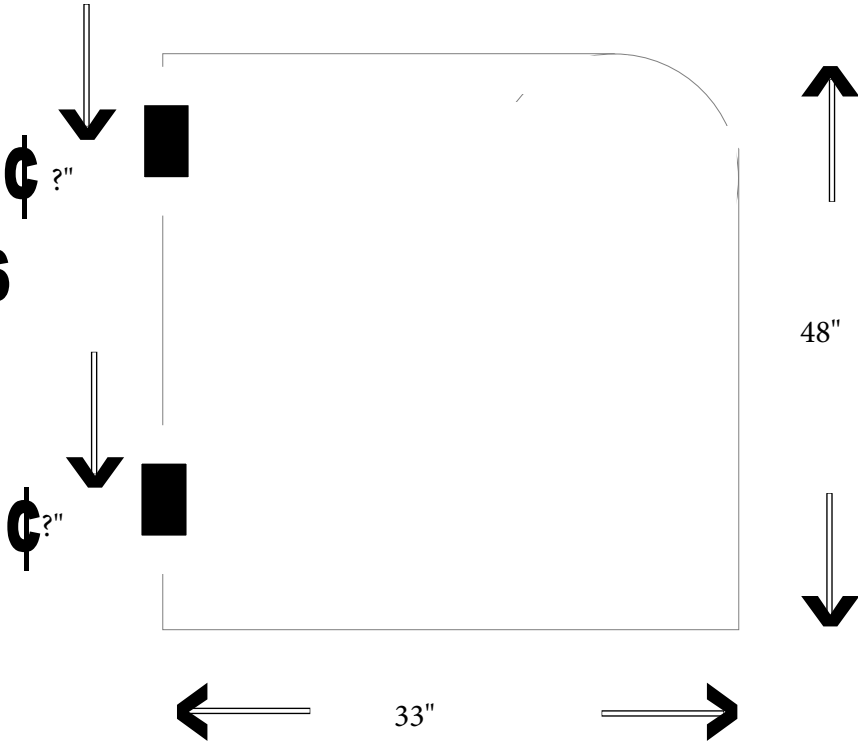


**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1044

Hinges

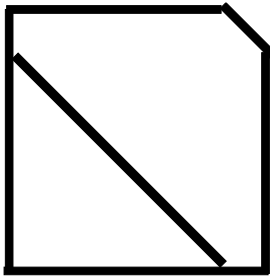
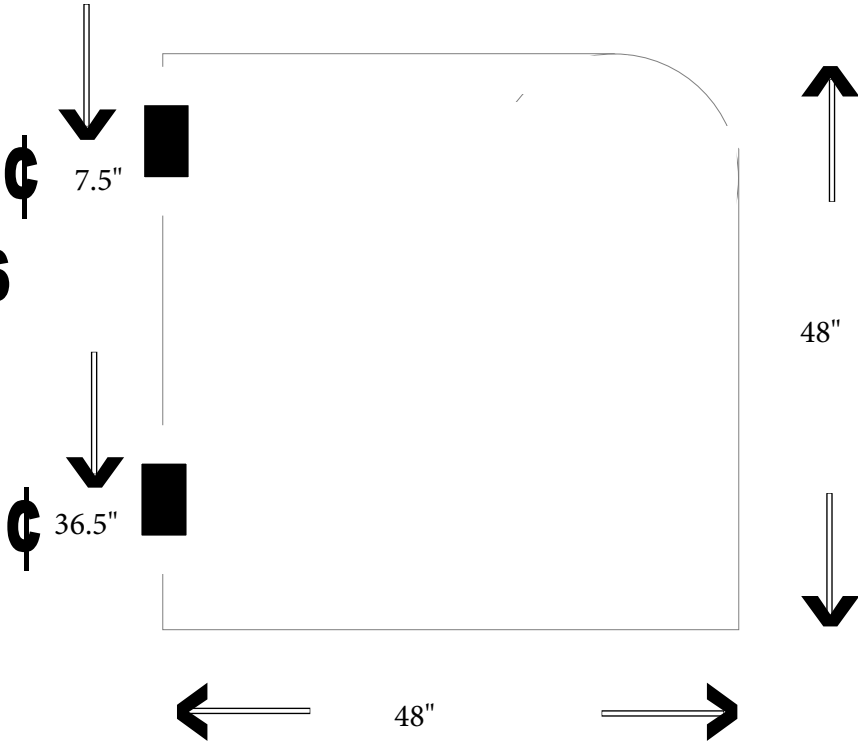


**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**



Buss # 1045

Hinges

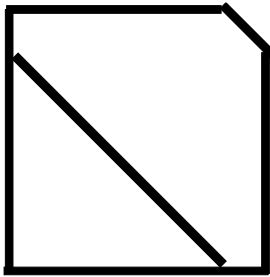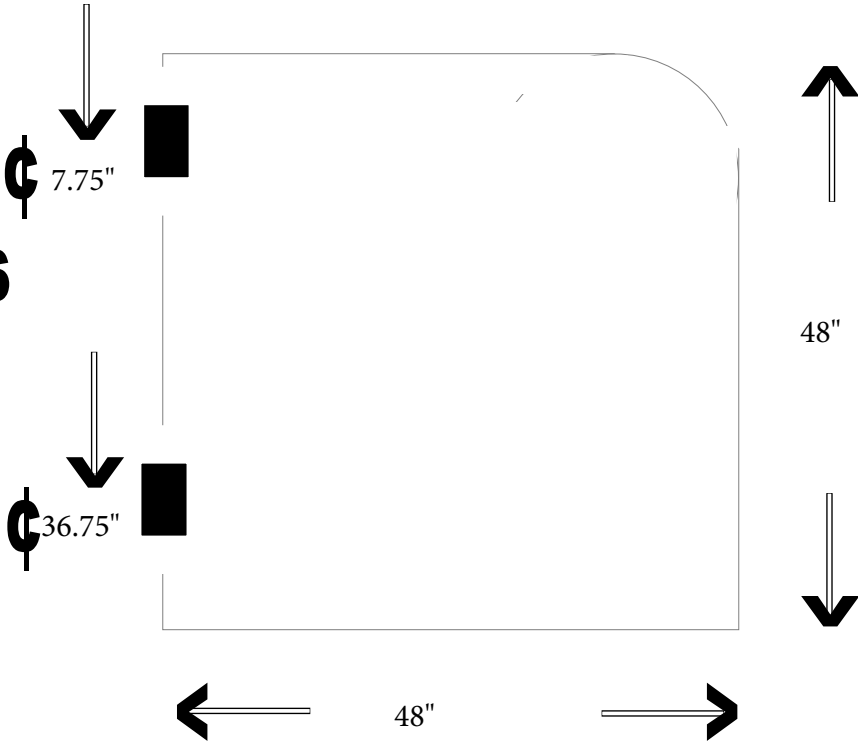



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1046

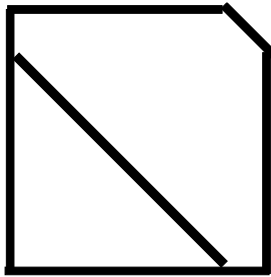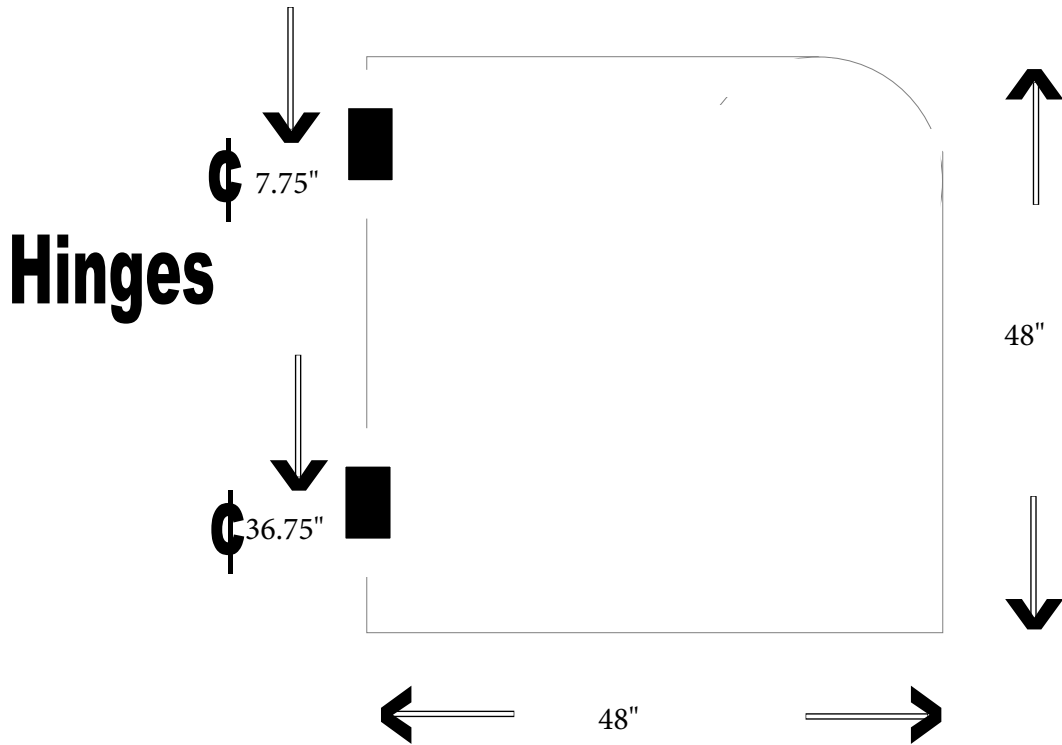

**Frame inset .500 on
hinge side
1" on to bottom &
handle side**



Buss # 1050

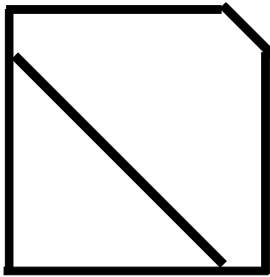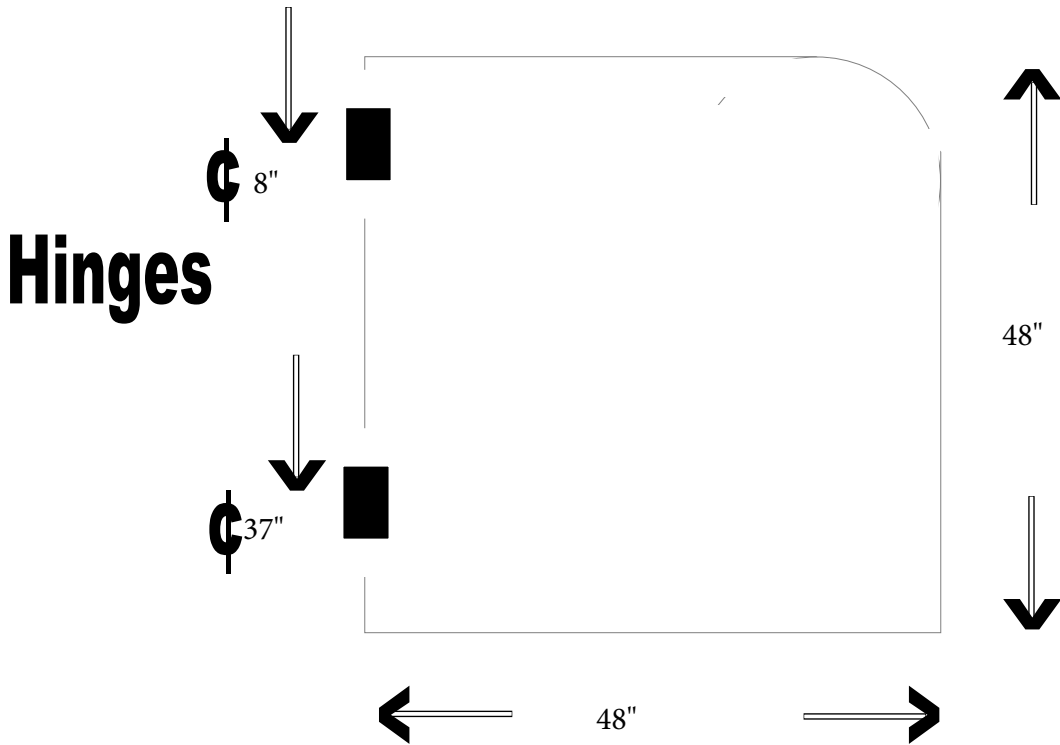

**Frame inset .500 on
hinge side
1" on to bottom &
handle side**



Buss # 1051

Hinges

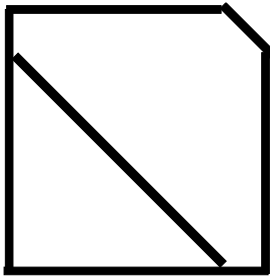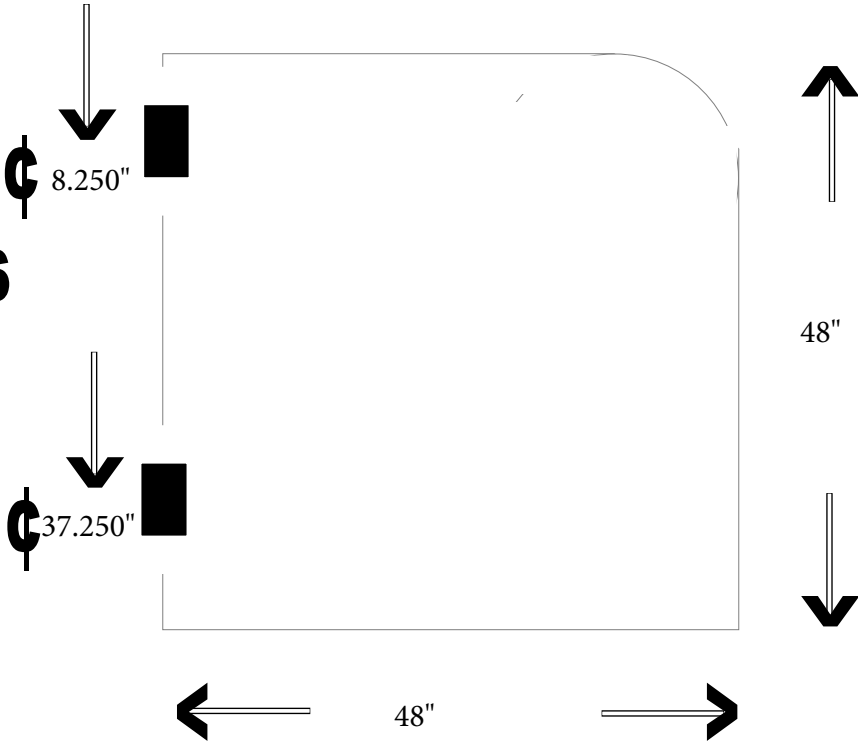



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1052

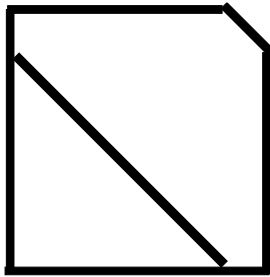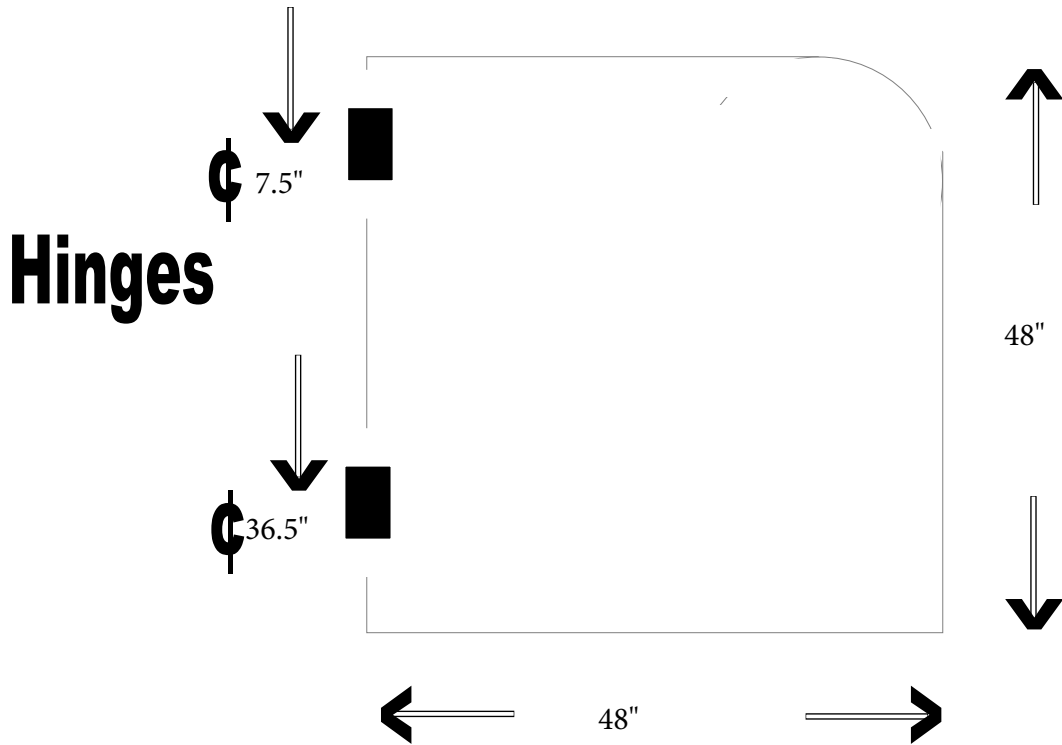



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1054

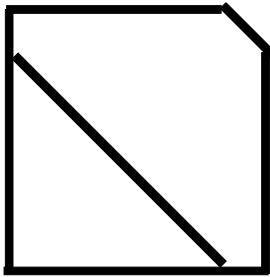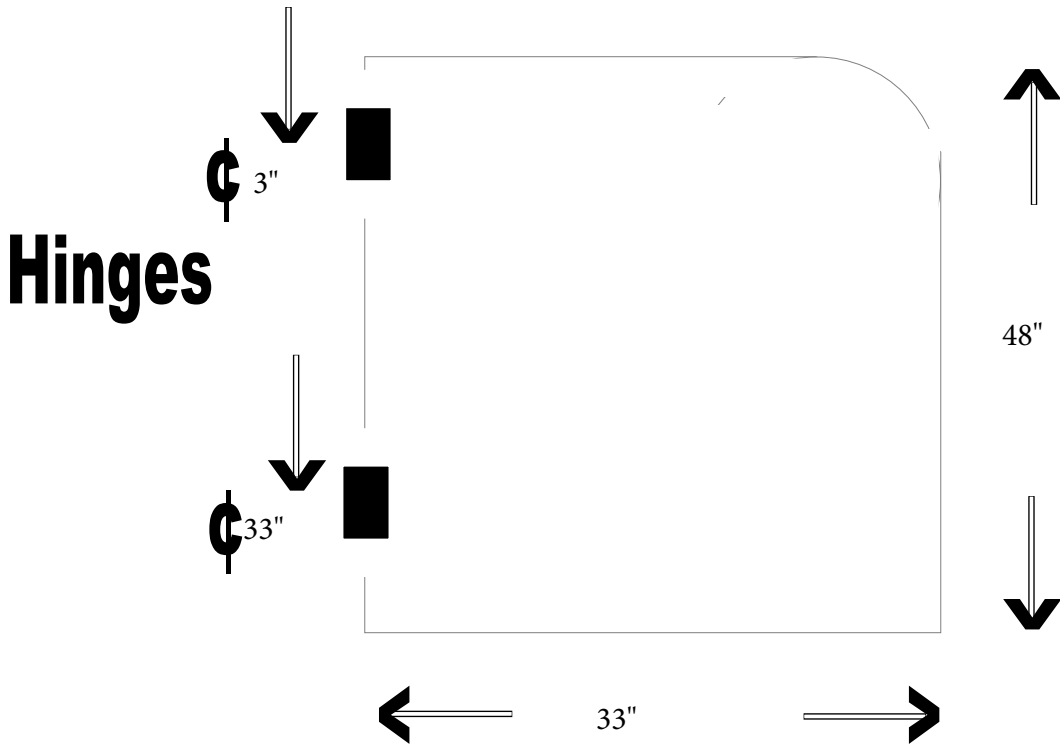



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1458

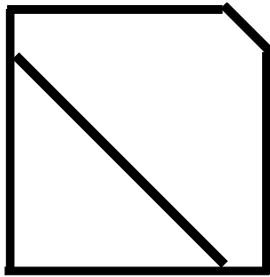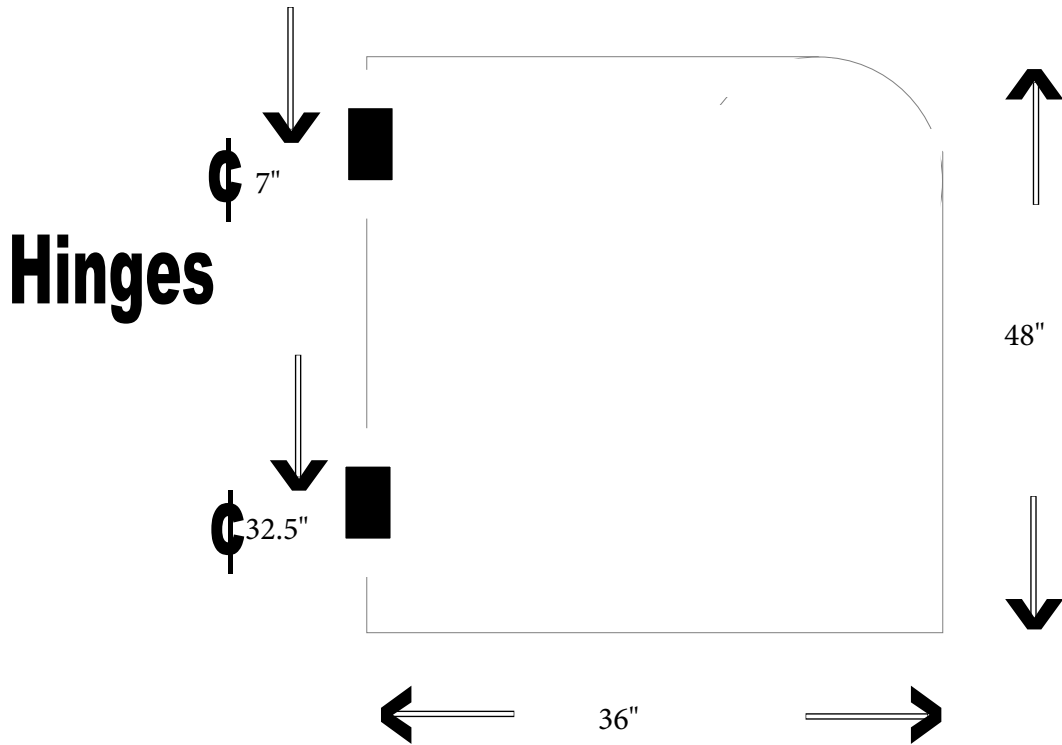

**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1459

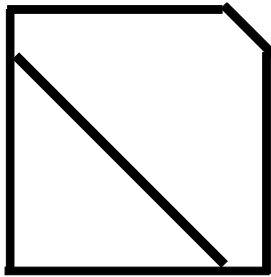
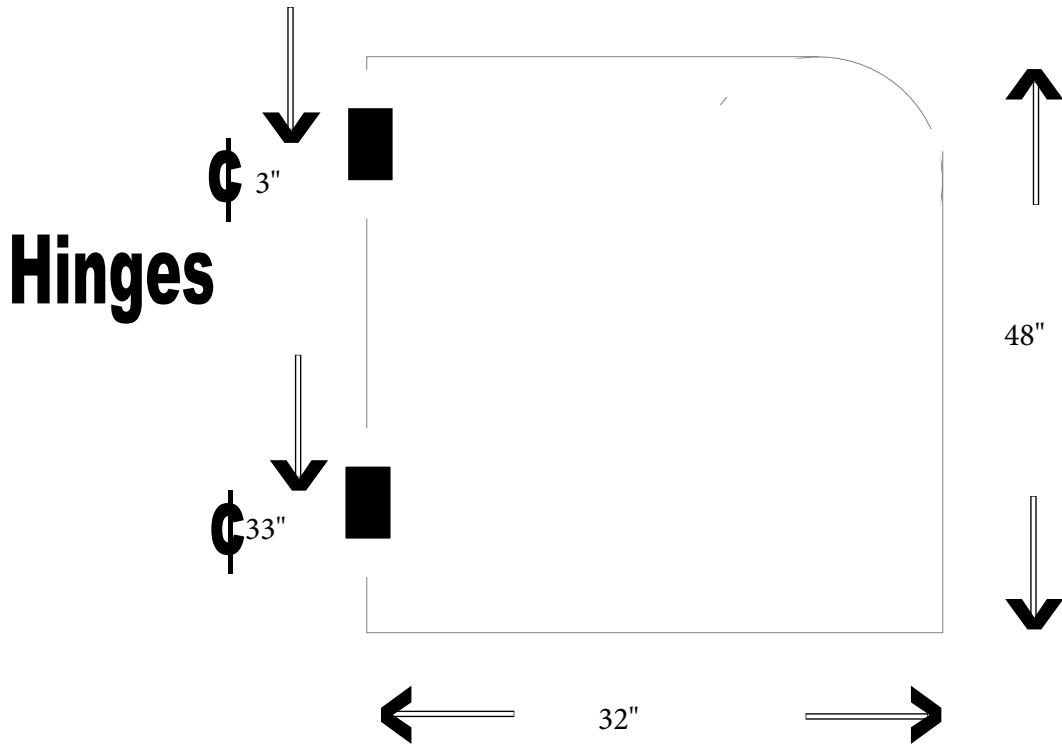


**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1501

Hinges

will need
1.25" pipe
clamp to
mount hinge

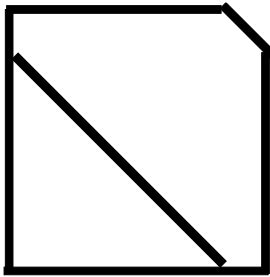
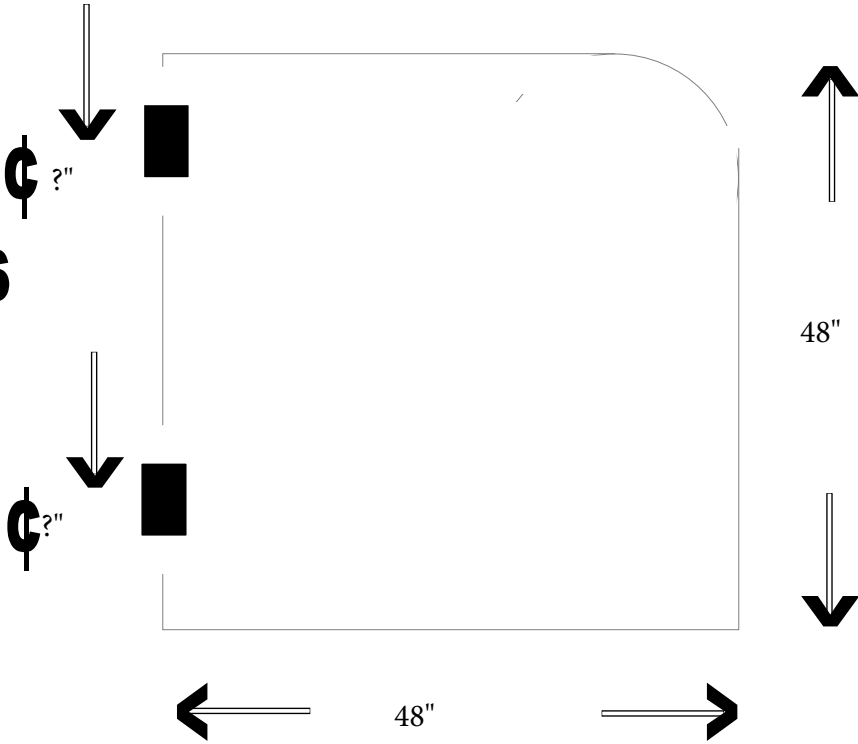


**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 1502

Hinges

will need
1.25" pipe
clamp to
mount hinge
no stand

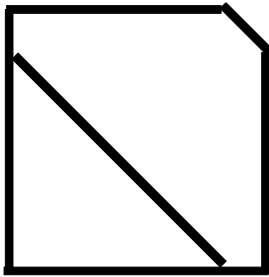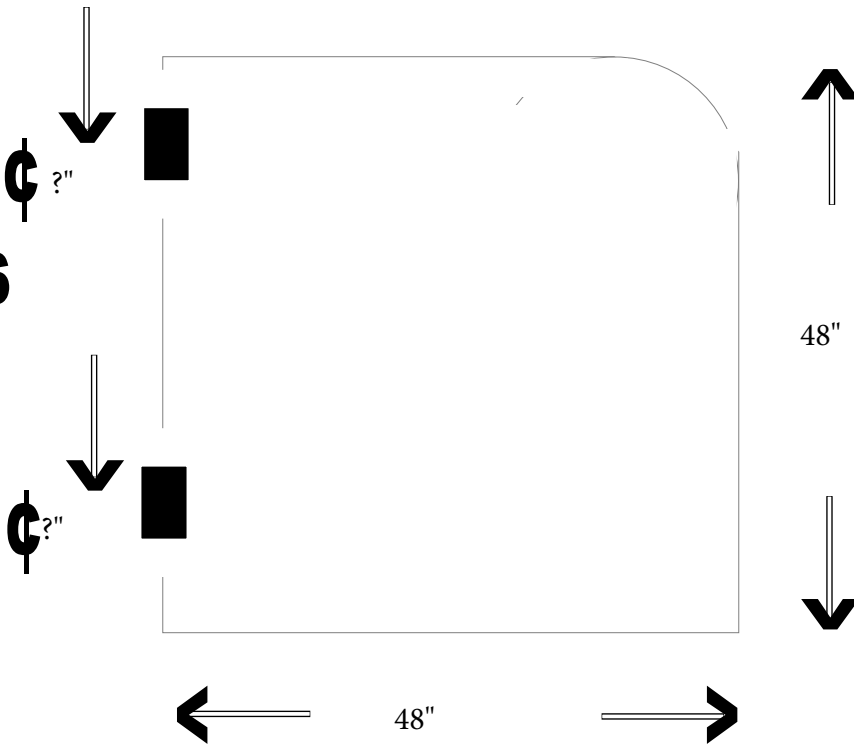



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1503

Hinges

will need
1.25" pipe
clamp to
mount hinge

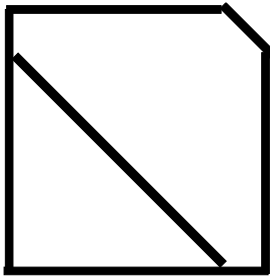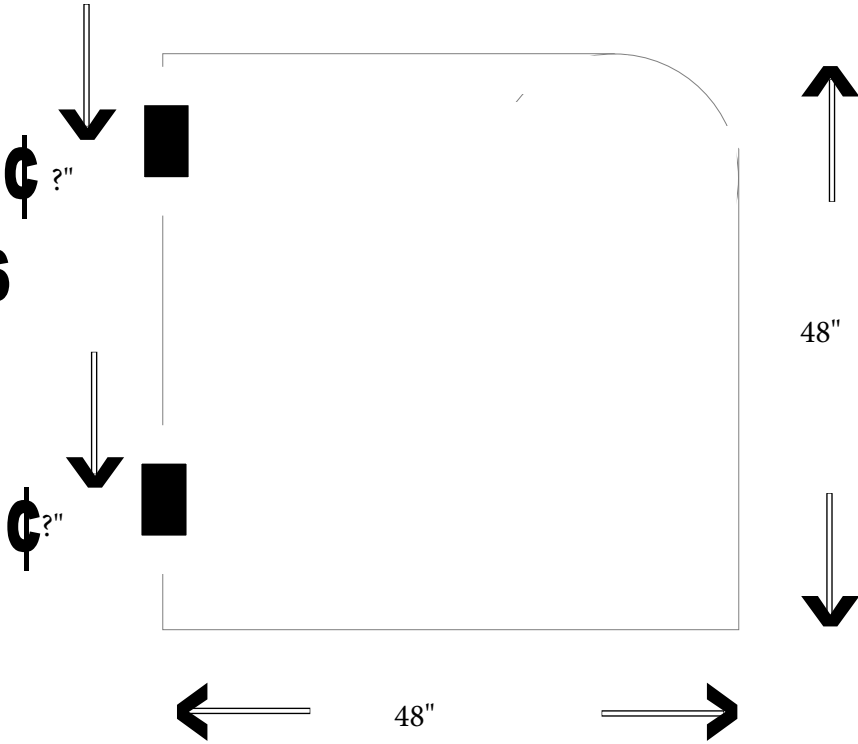



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1504

Hinges

will need
1.25" pipe
clamp to
mount hinge
no stand

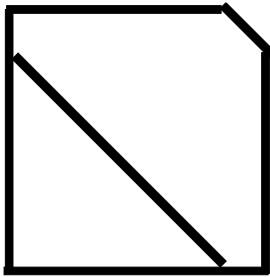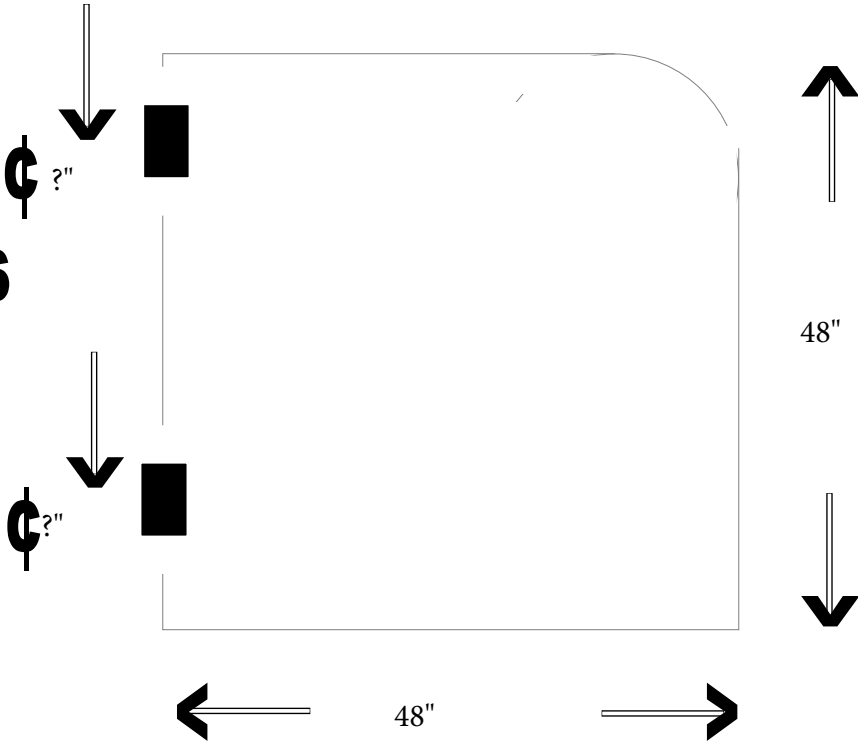



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1505

Hinges

will need
1.25" pipe
clamp to
mount hinge

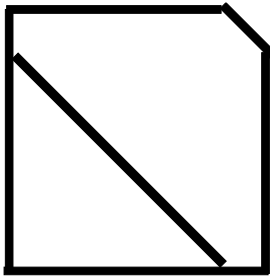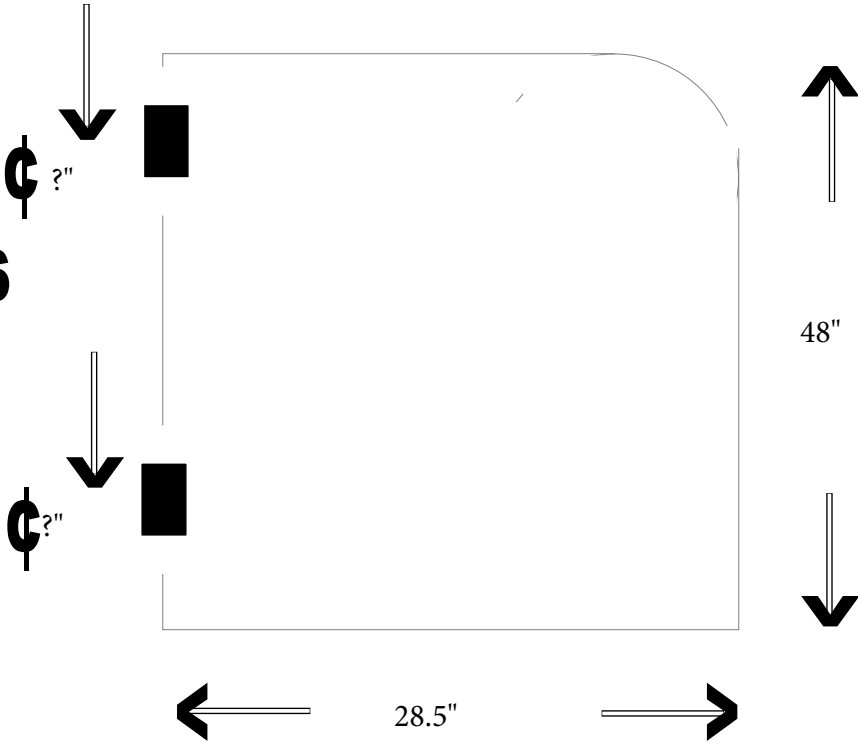



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1506

Hinges

will need
1.25" pipe
clamp to
mount hinge

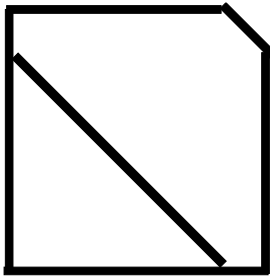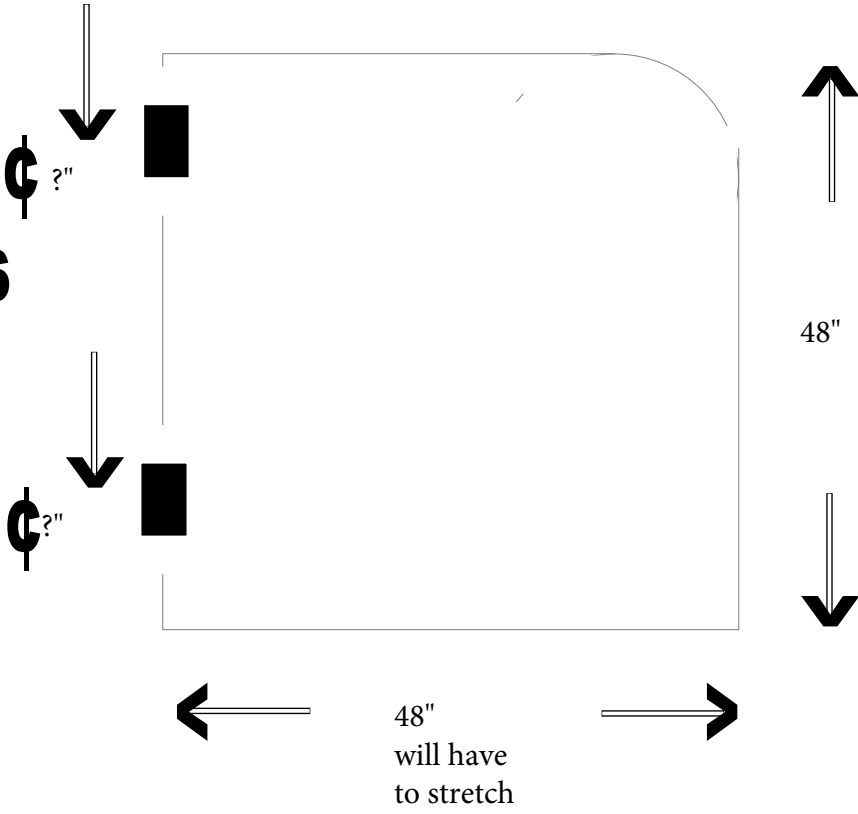



**Frame inset .500 on
hinge side**

**1" on to bottom &
handle side**

Buss # 1507



Hinges

will need
1.25" pipe
clamp to
mount hinge
no stand

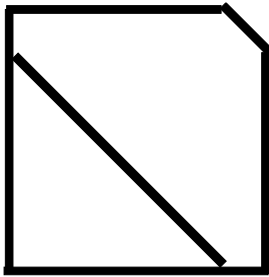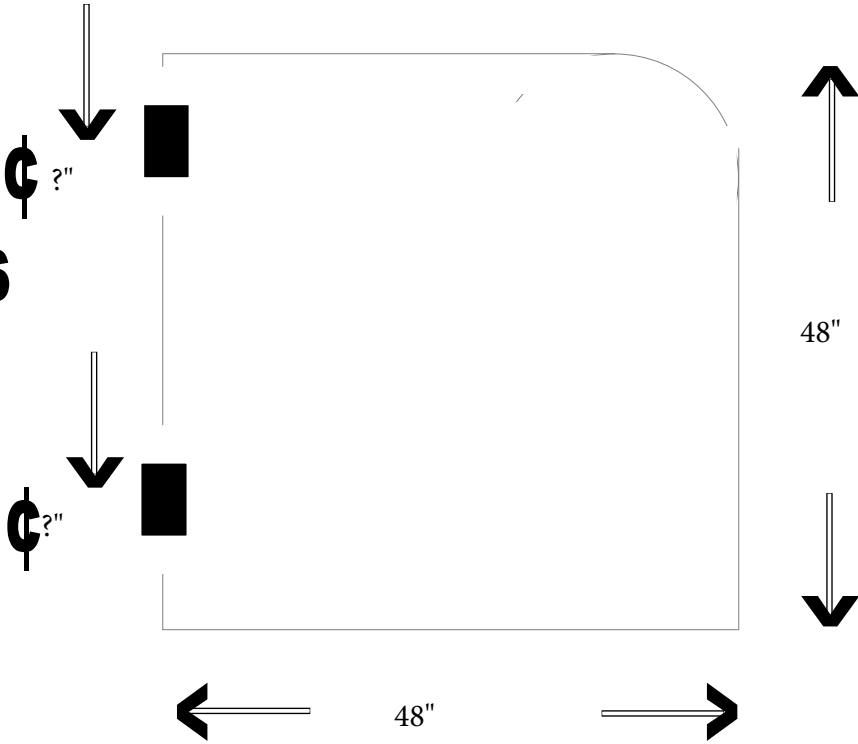



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 9823

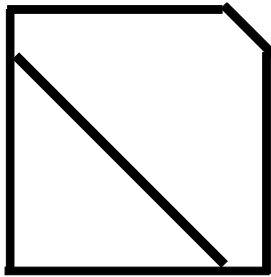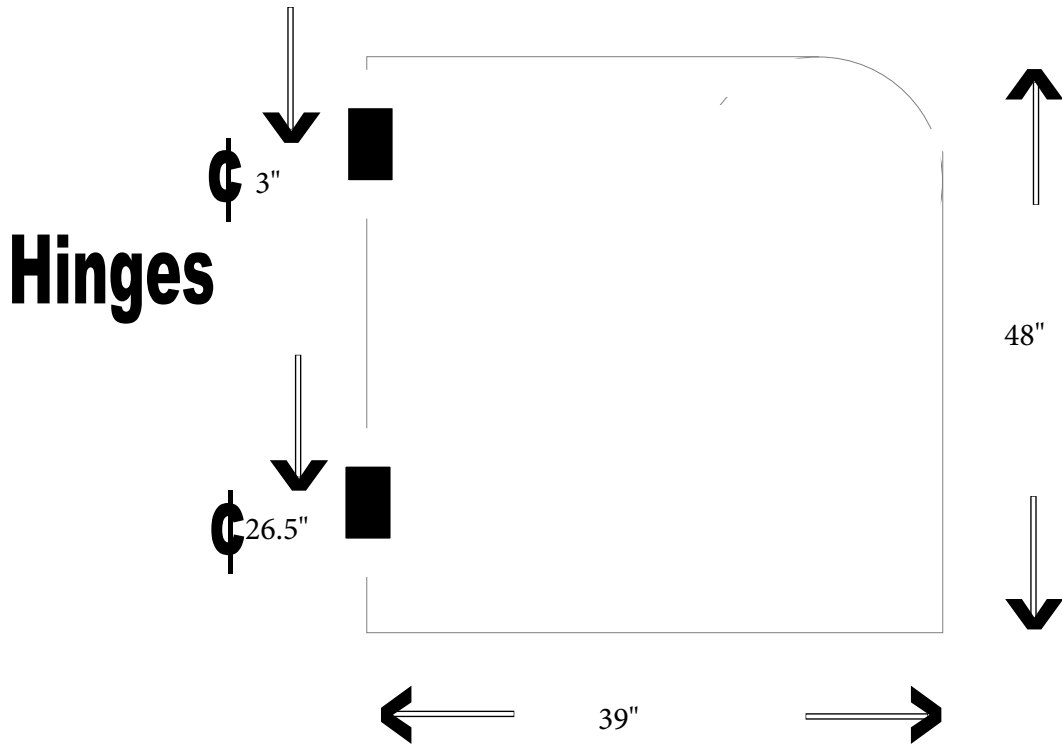



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 9824

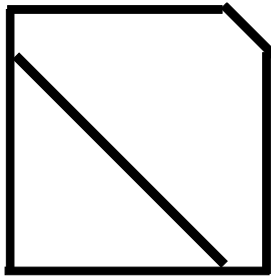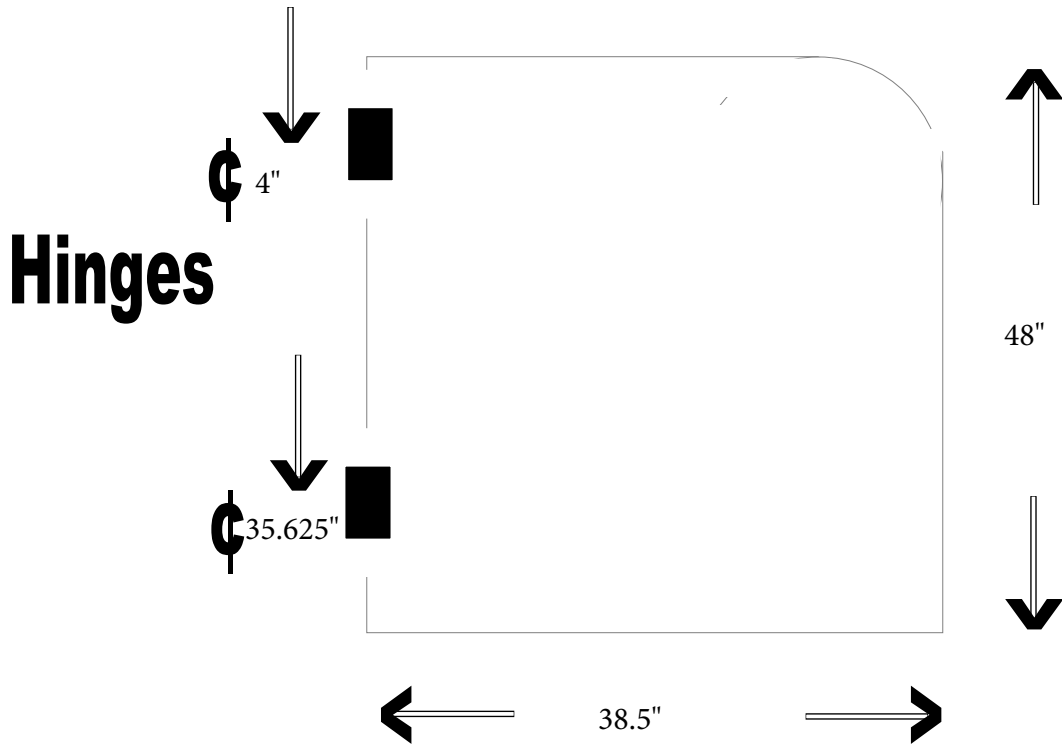



**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 9825

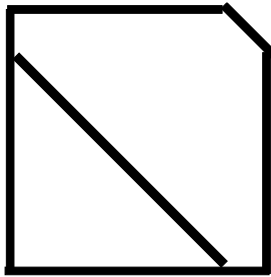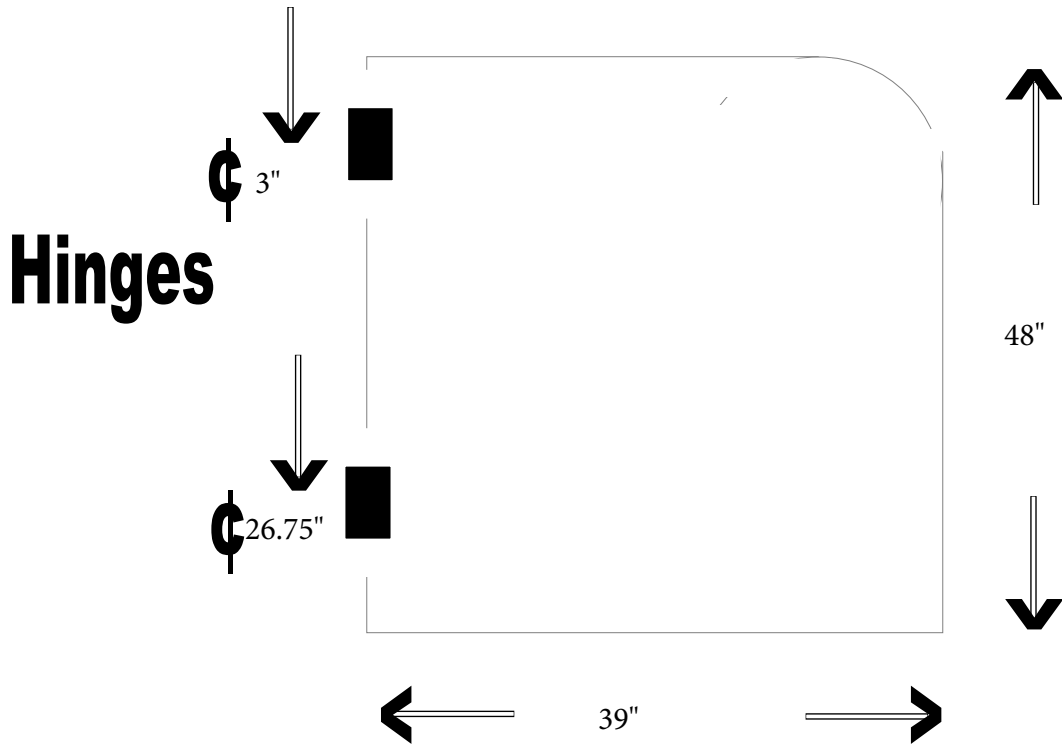

**Frame inset .500 on
hinge side
1" on to bottom &
handle side**

Buss # 9926

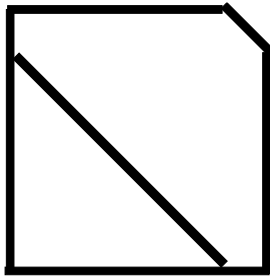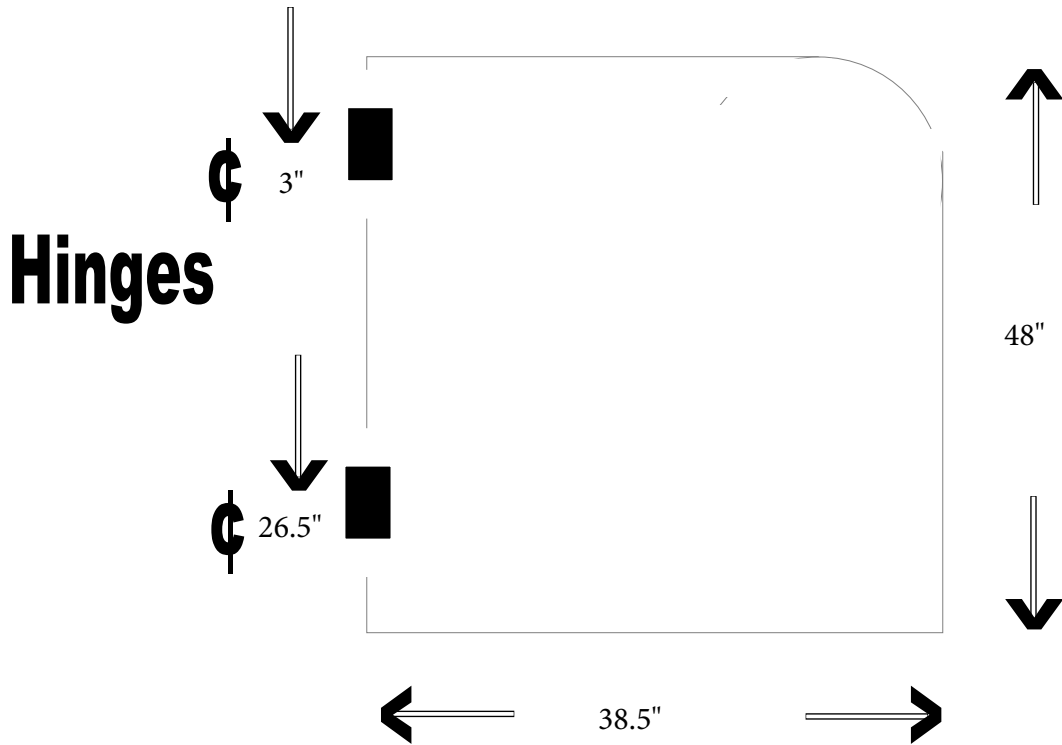

**Frame inset .500 on
hinge side
1" on to bottom &
handle side**